





# Installation

## Step 1 Determine the location of the sewage pipe.

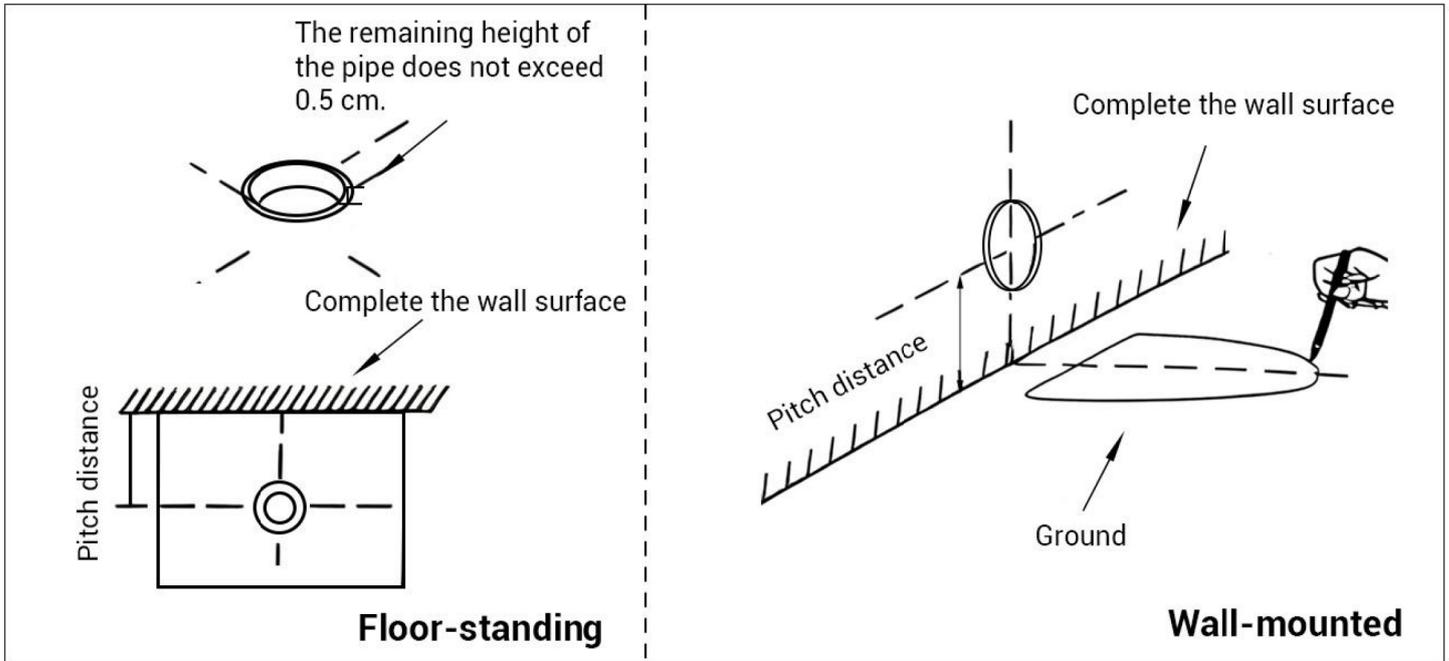


## Step 2 The sewage outlet is aligned with the ground sewage pipe.

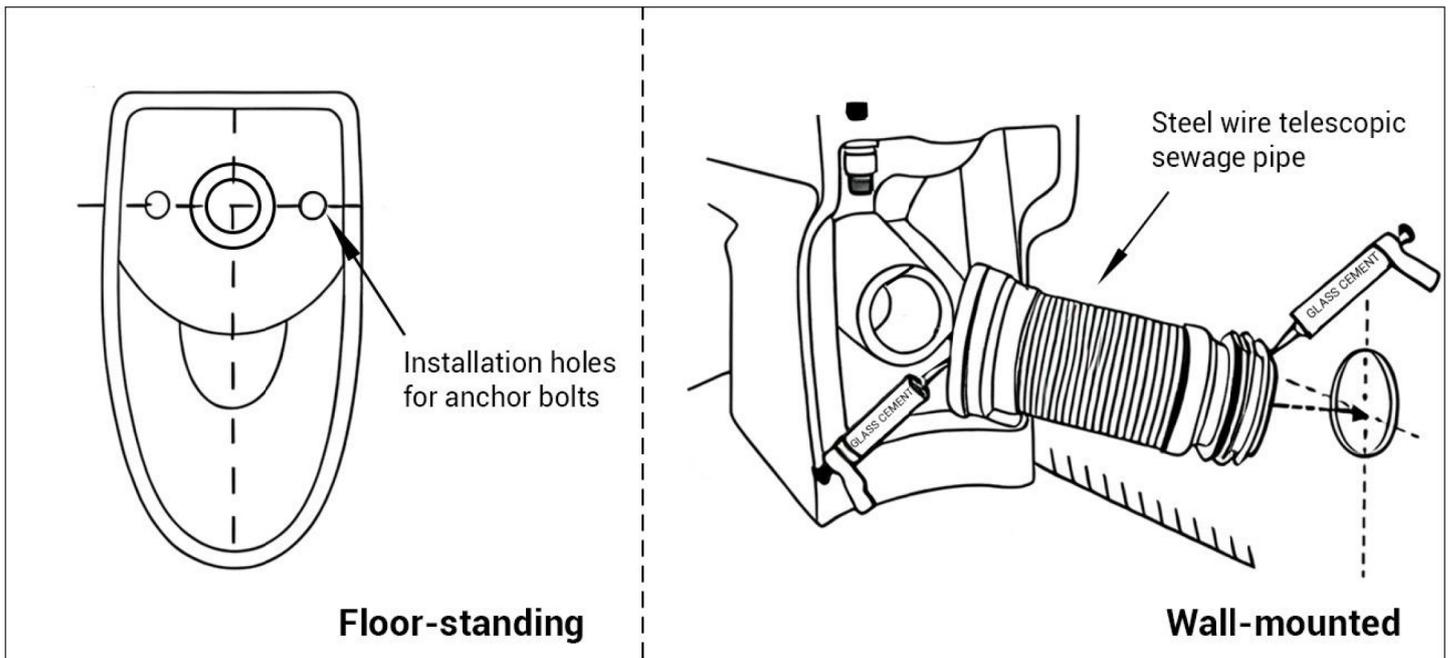

**Note:** At both ends of the steel wire telescopic sewage pipe, a layer of silicone sealant needs to be applied.

### Step 3


#### Mounting cover plate

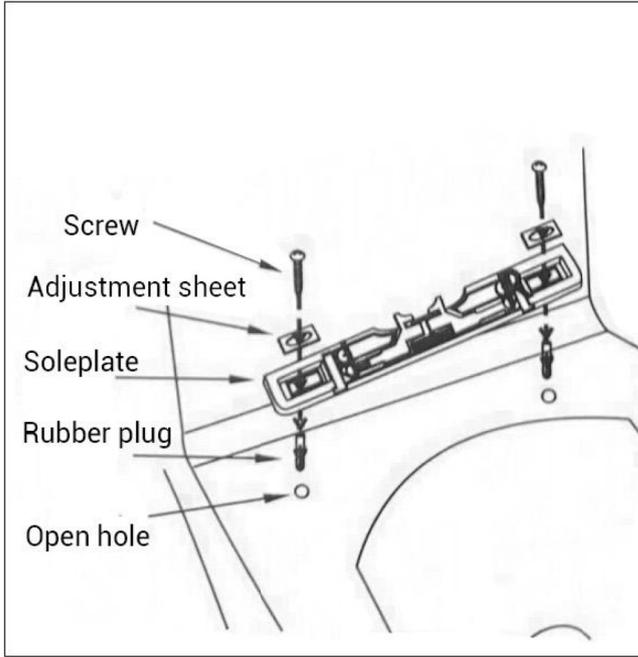


**Note:** For detailed installation instructions, please refer to the cover manual in the accompanying box.

### Step 4

#### Install the angle valve hose

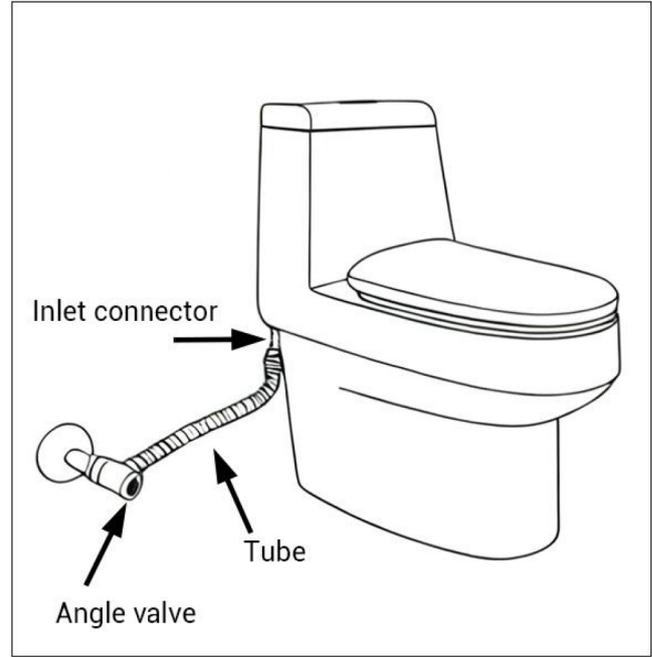


### Step 5 Install the flange ring

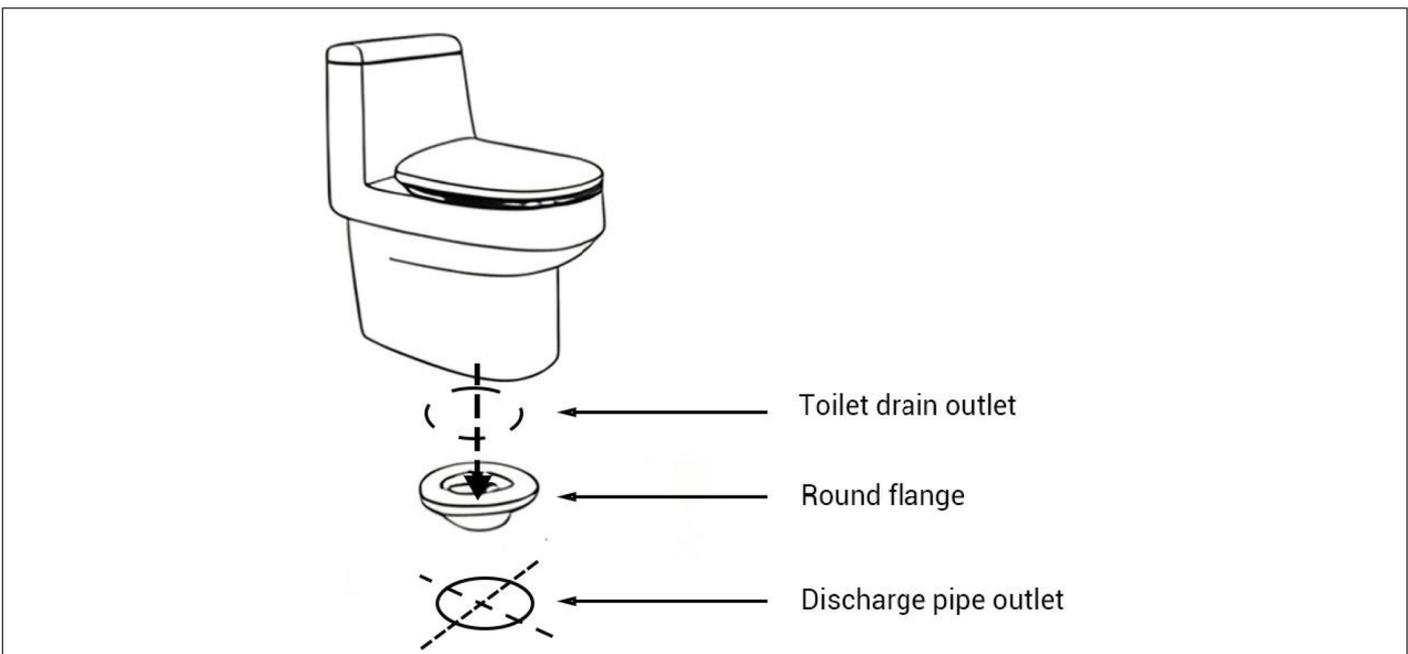


**Note:** It is recommended that the operation be carried out by two people together.

## Step 6 Test the flushing function (2-3 times)

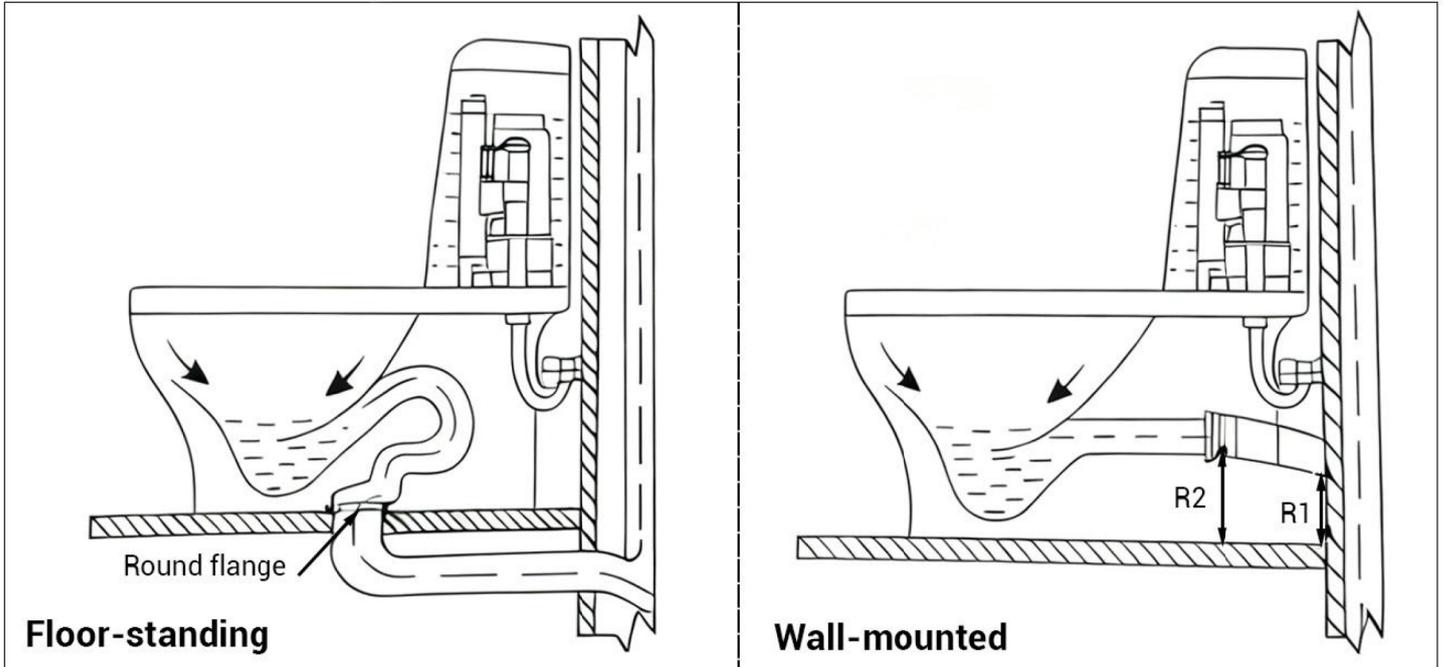

**Note:**  $R2 - R1 > 10\text{mm}$

## Step 7 Apply glass sealant for fixation

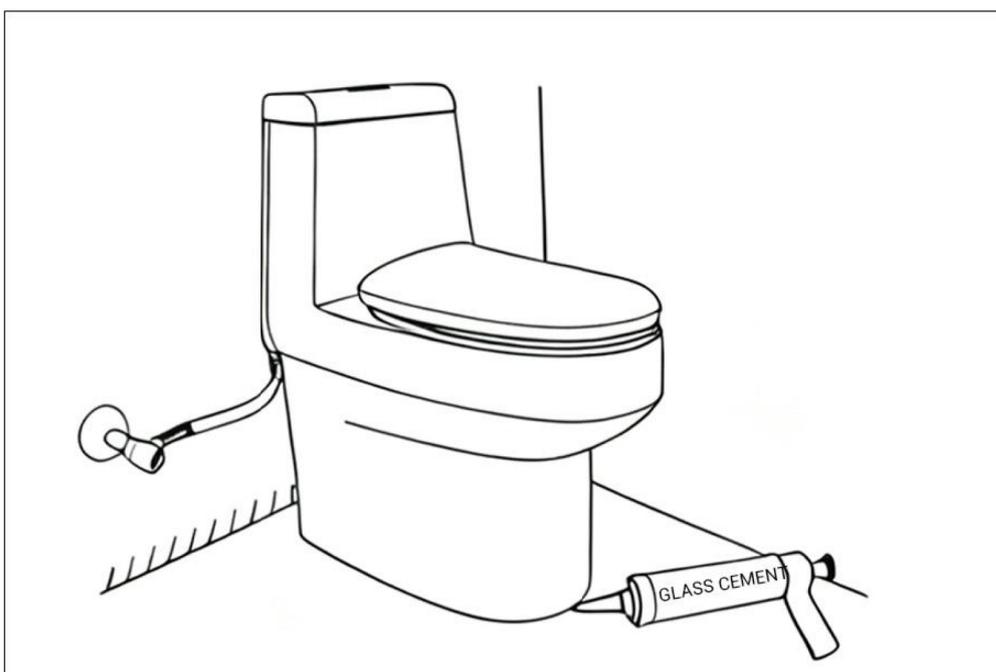

**Note:** Even the bottom part of the bent pipe also requires glass glue.