

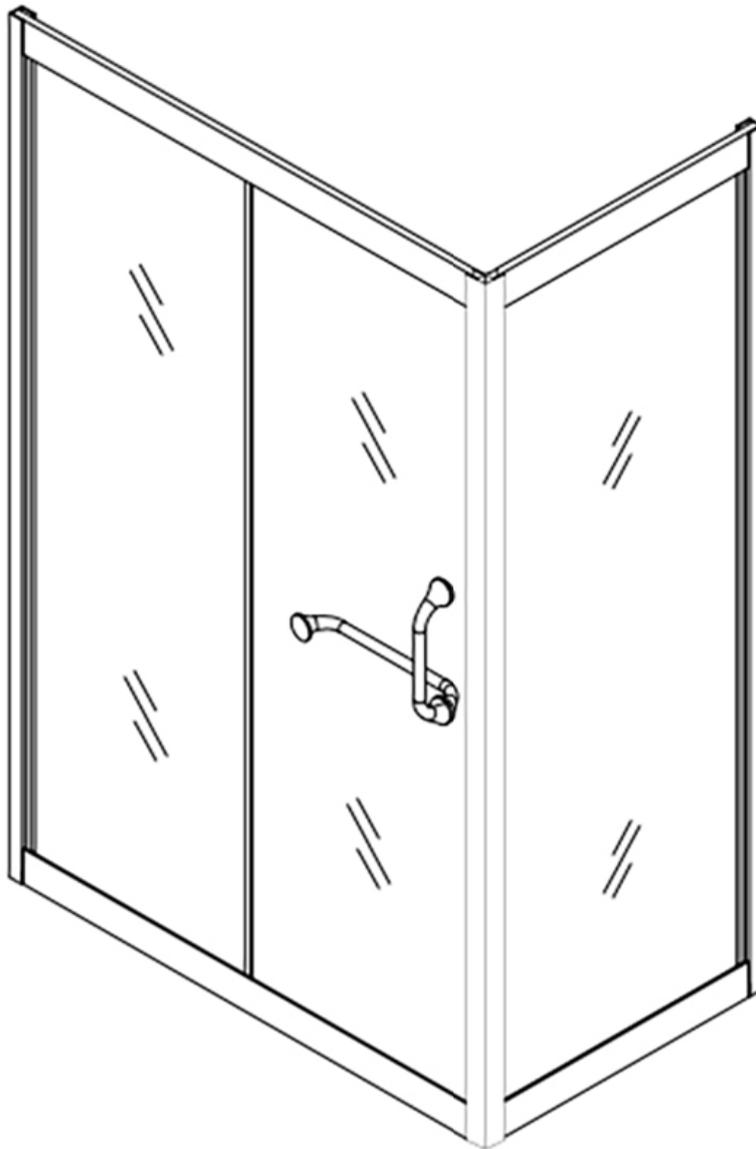
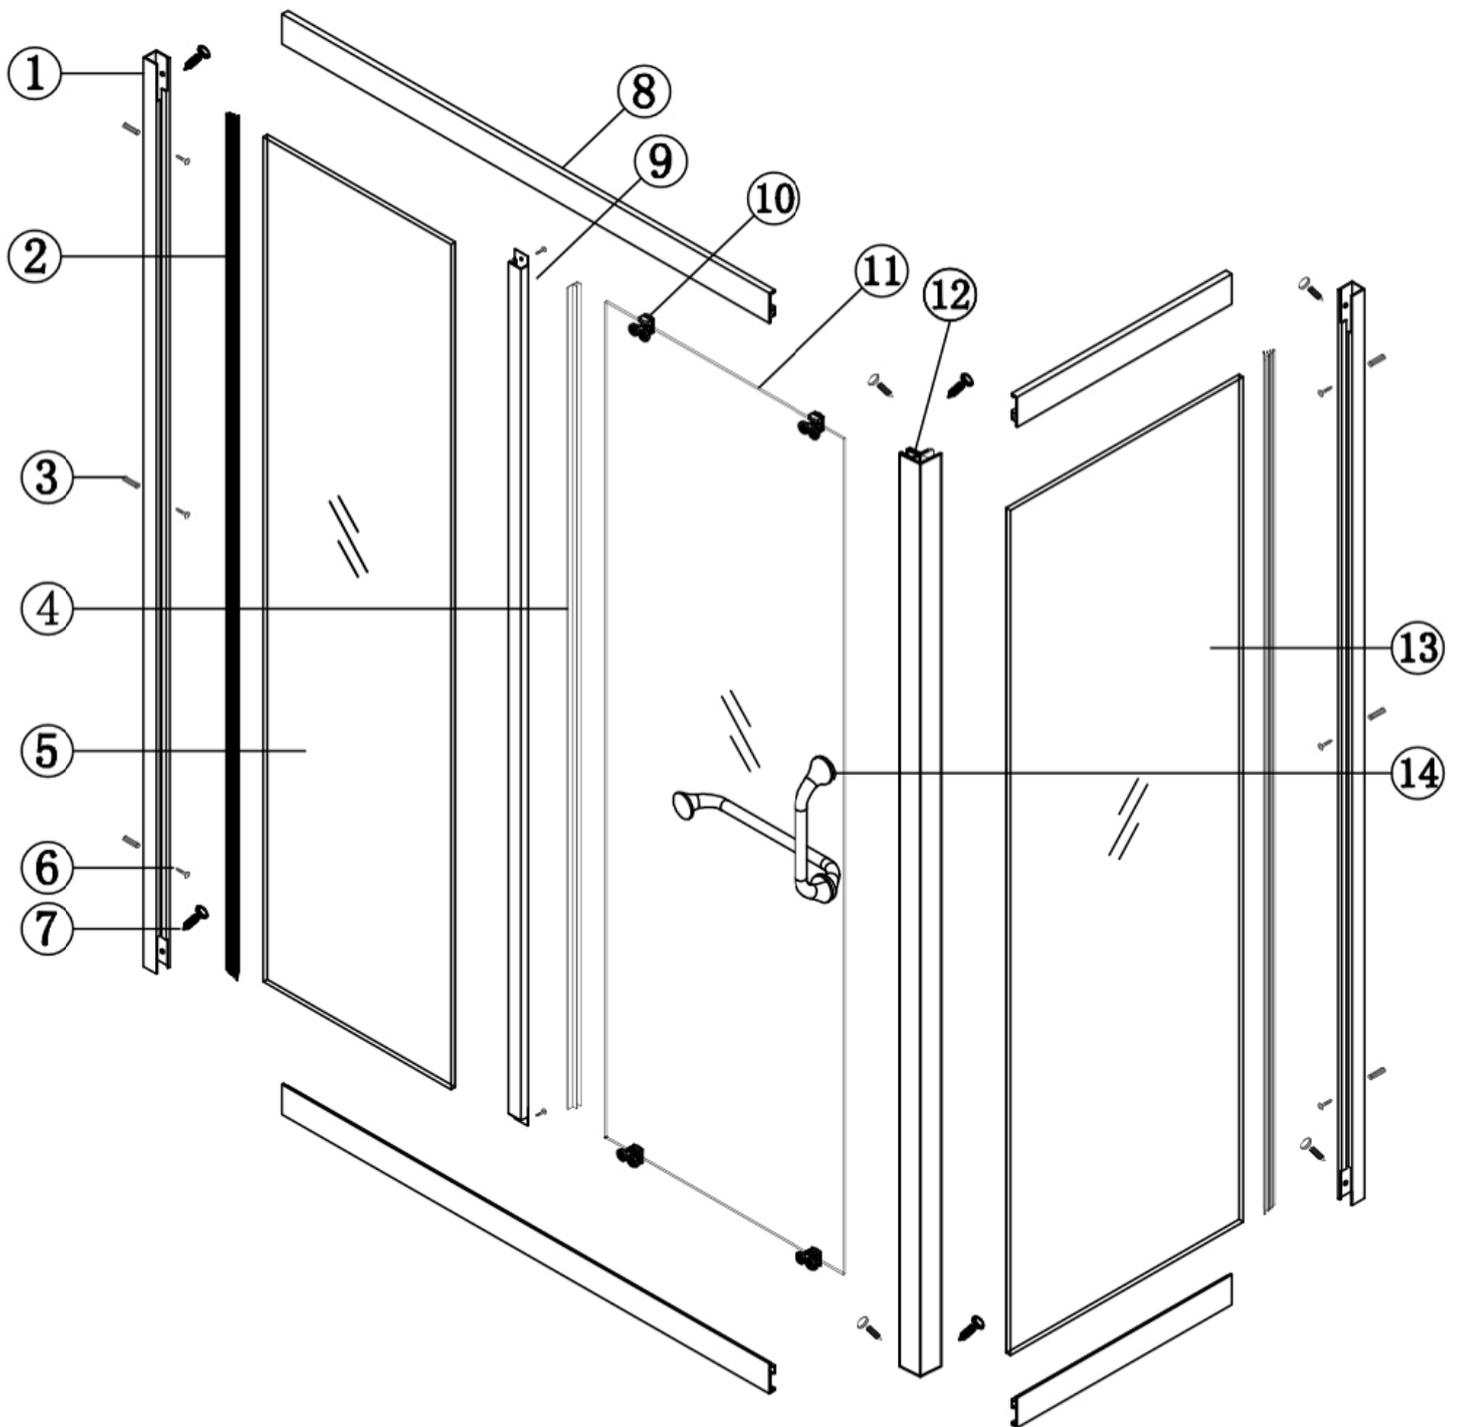



Installation Manual





NO.	NAME	PICTURE	Qty	NO.	NAME	PICTURE	Qty
1	Wall Profile		2	10	Rail		4
2	Water seal of one side		2	11	Moving Panel		1
3	Wall Ancho		6	12	Corner material		1
4	Vertical Water Guard		1	13	Flexible Glass Panel		1
5	Fixed Panel		2	14	Flexible Glass Panel		1
6	ST4*35		6				
7	Jbckscrew		8				
8	Rail		4				
9	Glass Clip		1				

Installation Tools

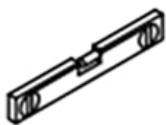

Level



Electric Drill



5mm Drill Bit




Glass Glue Gun



Rubber Hammer



Tape Measure

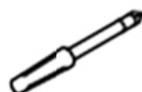

Screwdriver



Marker Pen

*Warm Reminder: If you have any questions about installation, please directly contact our company's

Pre-installation Preparation:





- 1: Check if the package is damaged before opening it.
- 2: Open the package to check if the accessories are complete and the glass is undamaged.




Installation Notes:







- 1: Handle the glass with care during transportation.
- 2: Understand the direction of water and electricity pipelines in the bathroom before drilling holes on the wall to avoid damaging them.
- 3: Be careful when drilling holes on the wall to prevent breaking the tiles.
- 4: Handle with care during installation to avoid product damage or scratches.










Post-installation Notes:


- 1: Inspect and adjust the shower enclosure to achieve the best installation effect.
- 2: Clean the site and tidy up the environment.
- 3: Apply glass glue for waterproofing.
- 4: Place a sign or reminder indicating that the product can be used after 24 hours.

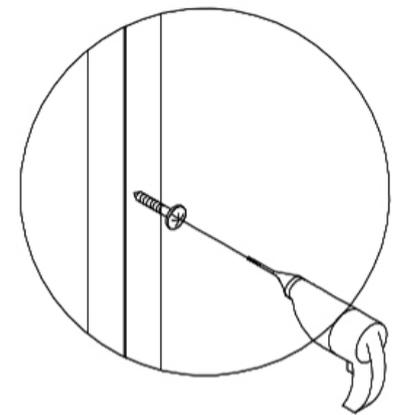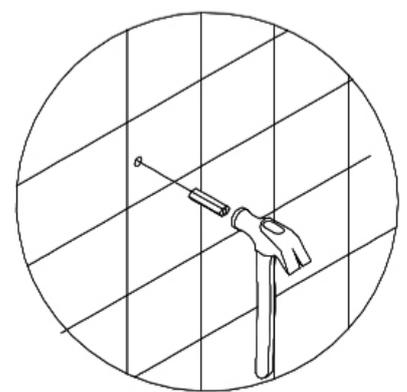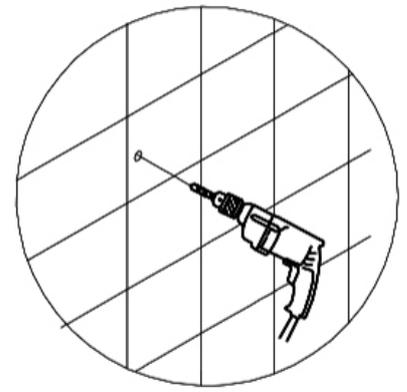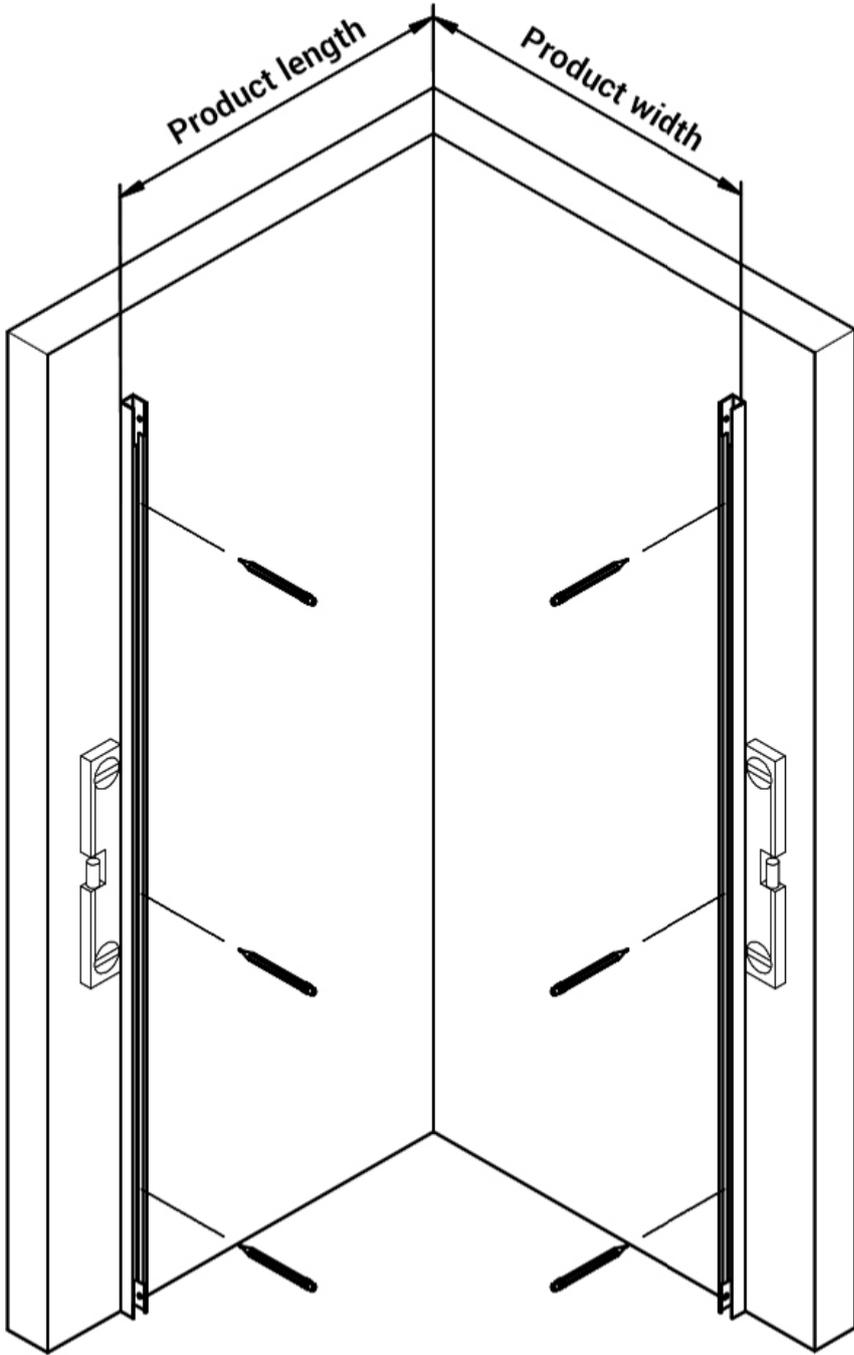

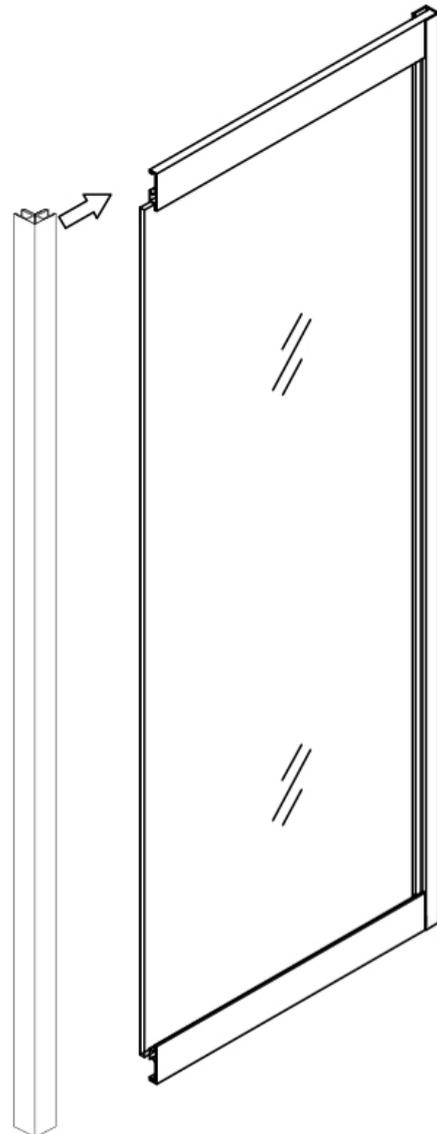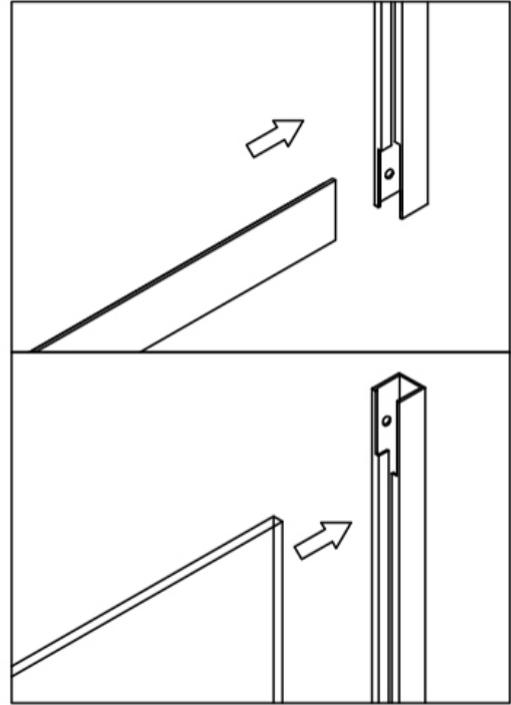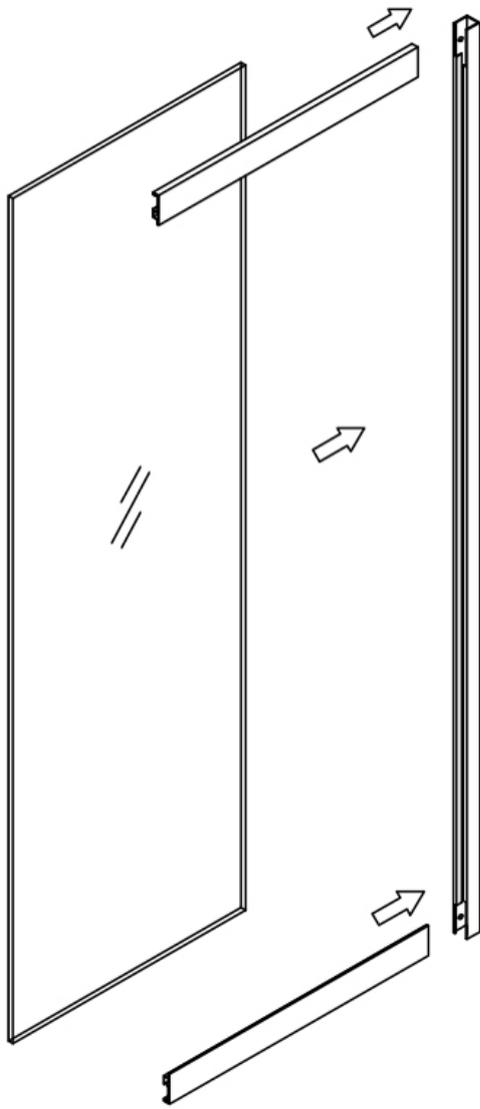

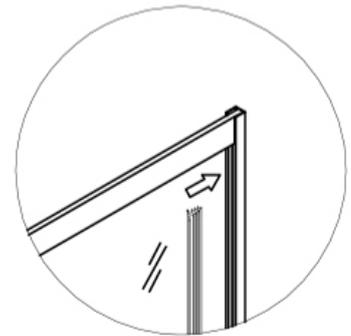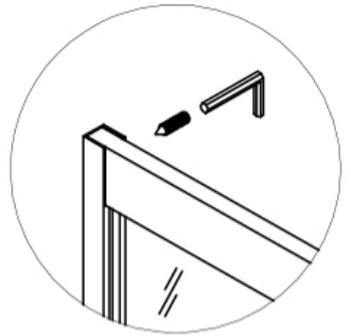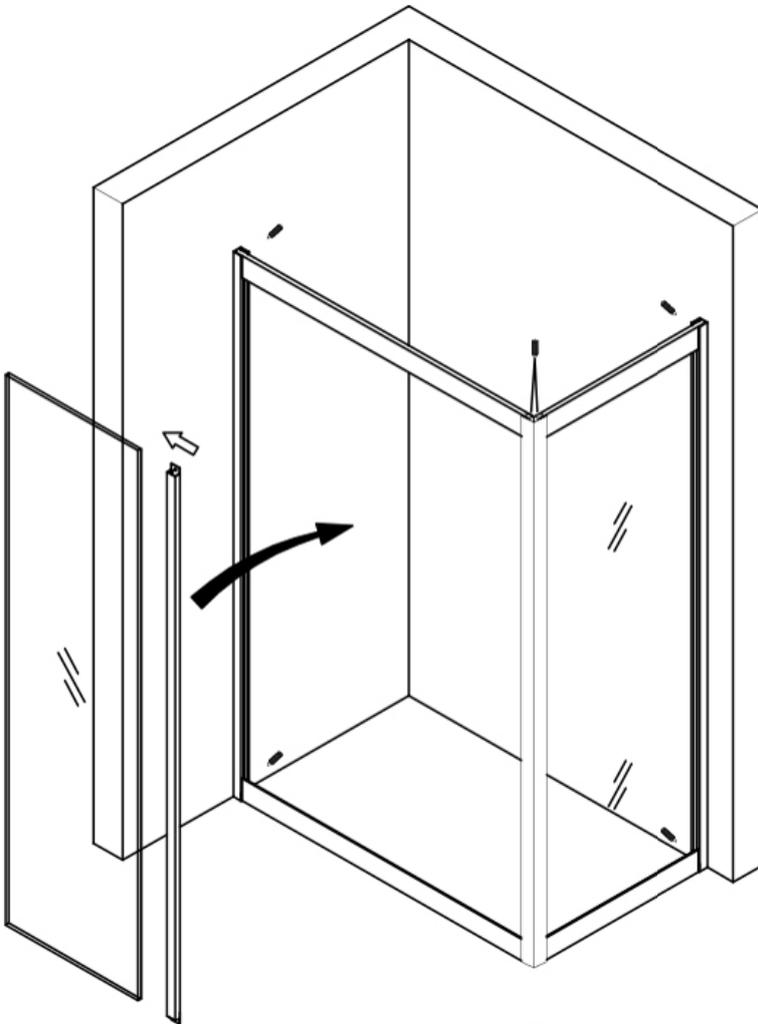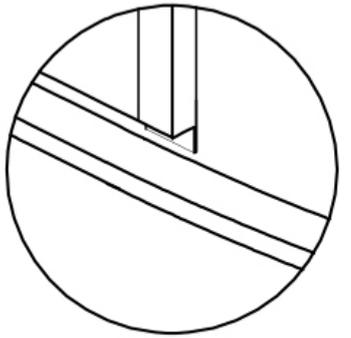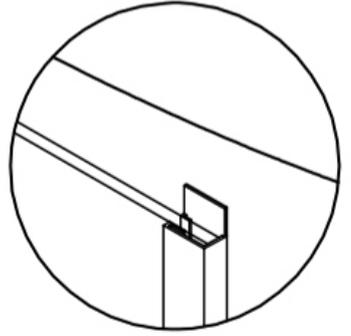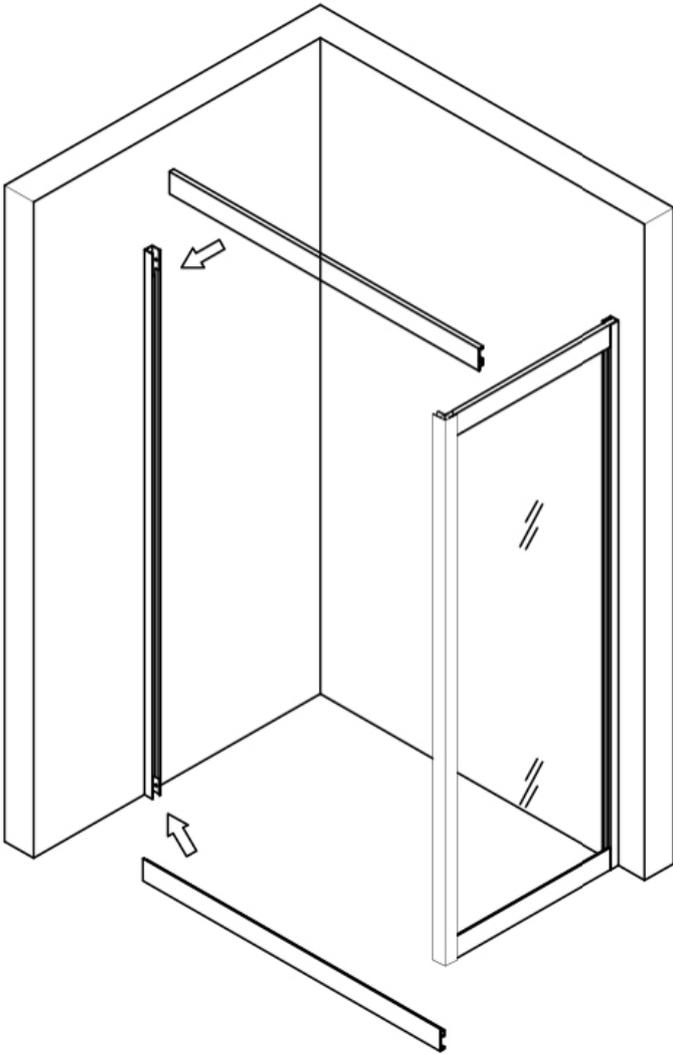

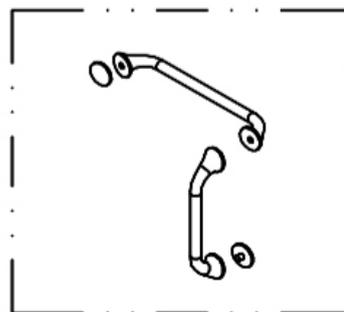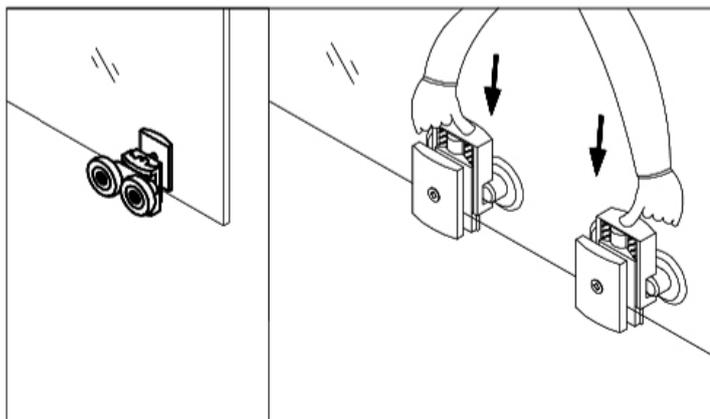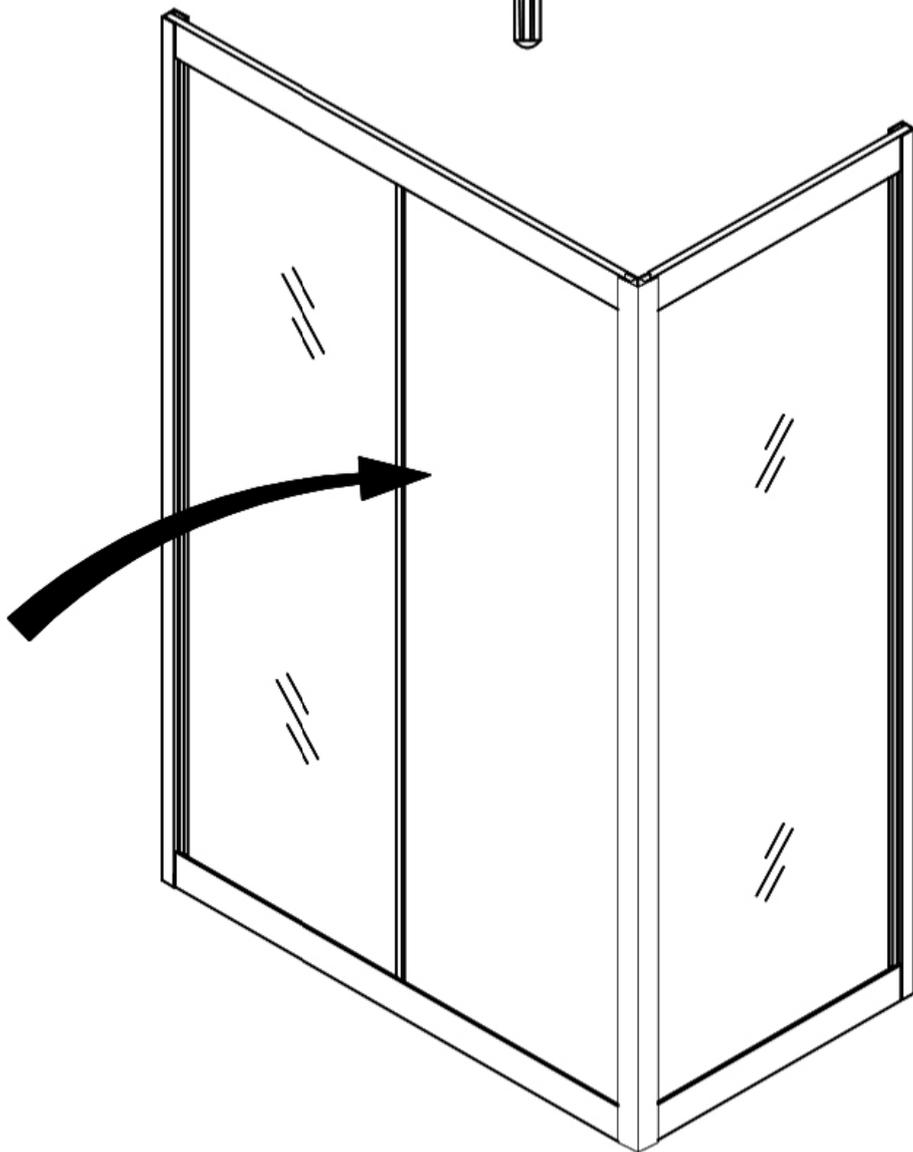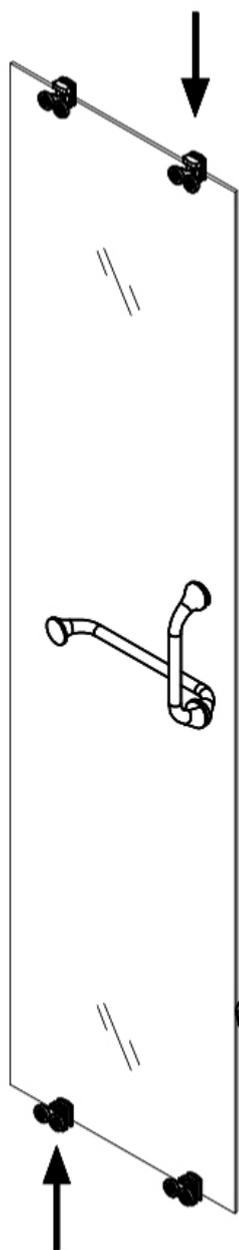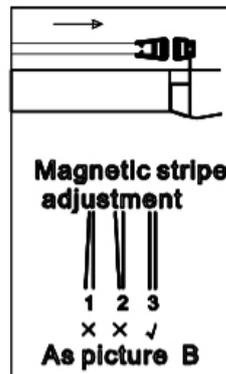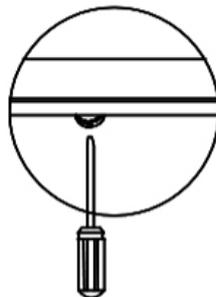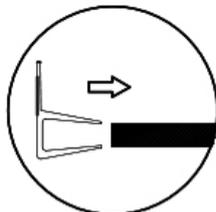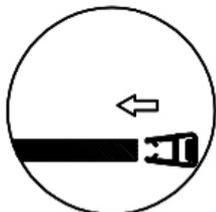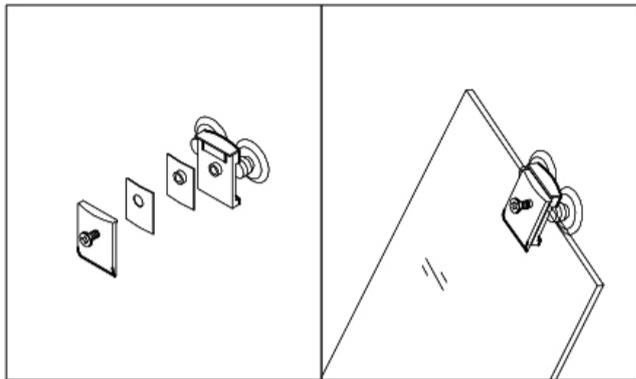

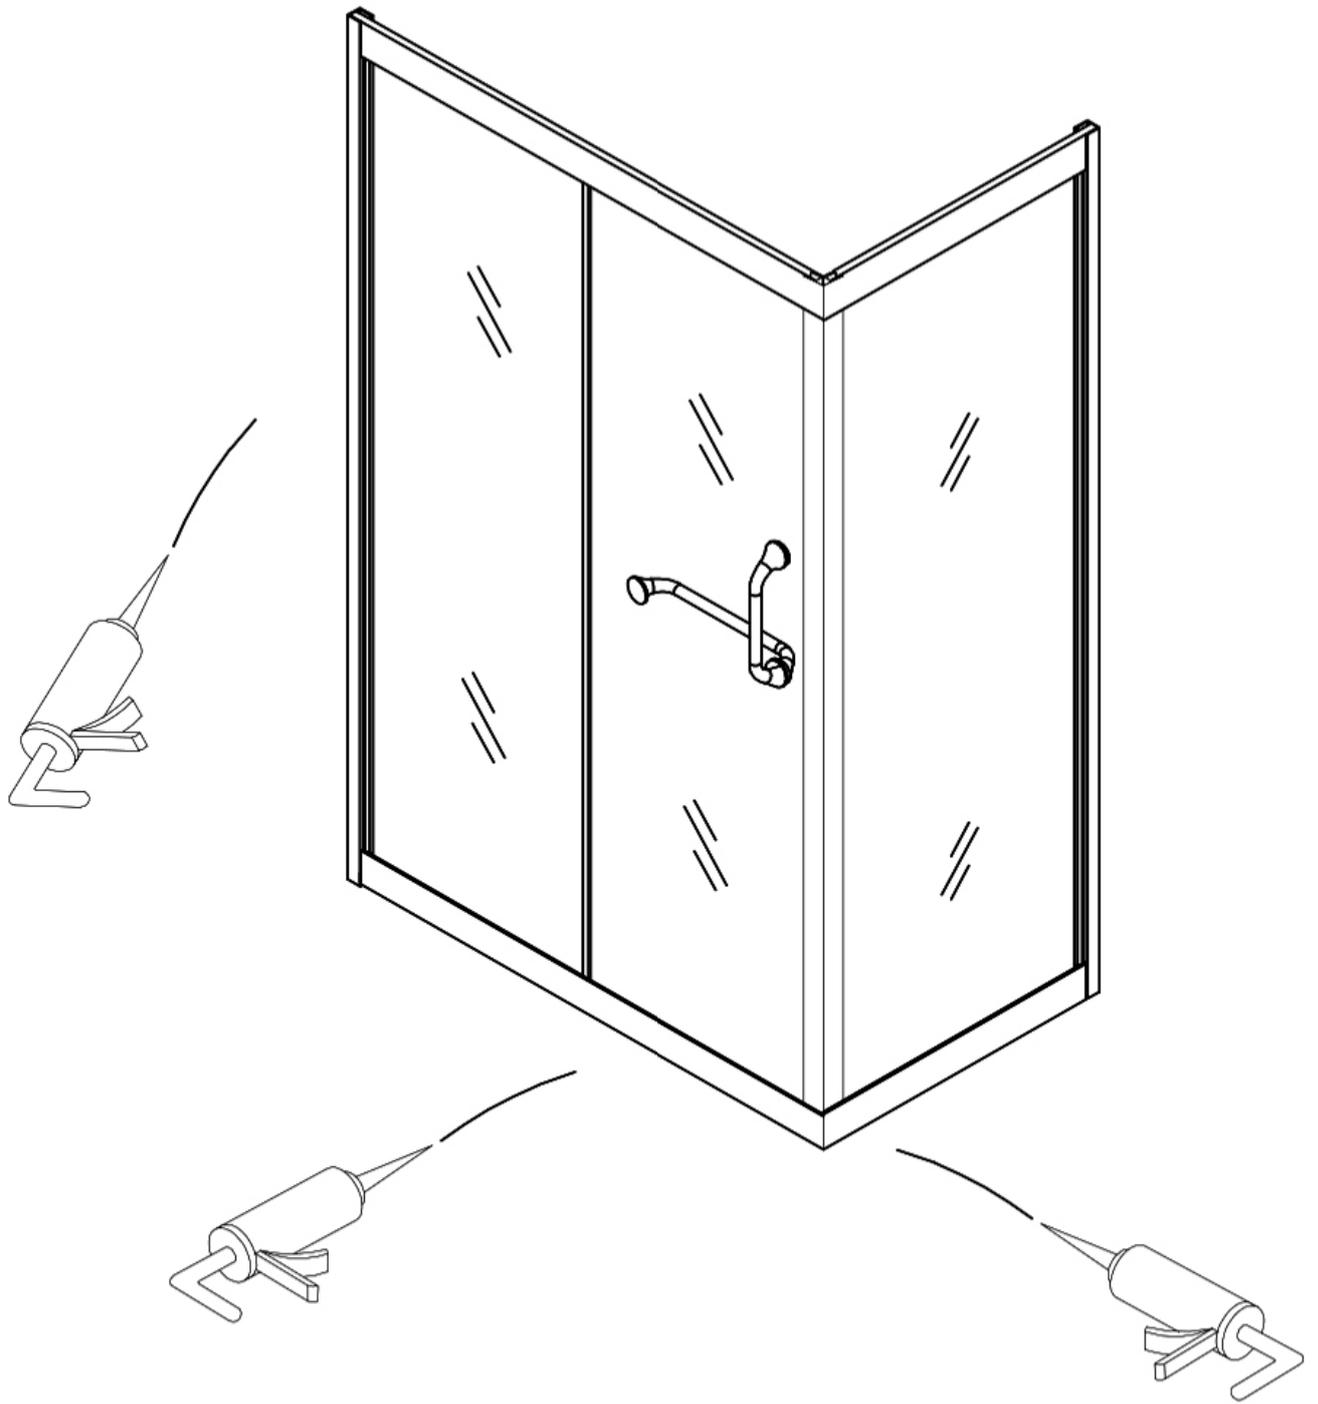

24 Hours

